




VECObserve Manual

Features of VECObserve




- Write single parameter online
- Monitor the running curve of any parameter in real time
- Save and load the running curve data
- Analyze the running curve data
- Update all parameters of the drive
- Read all the parameters of the drive

Write single parameter online

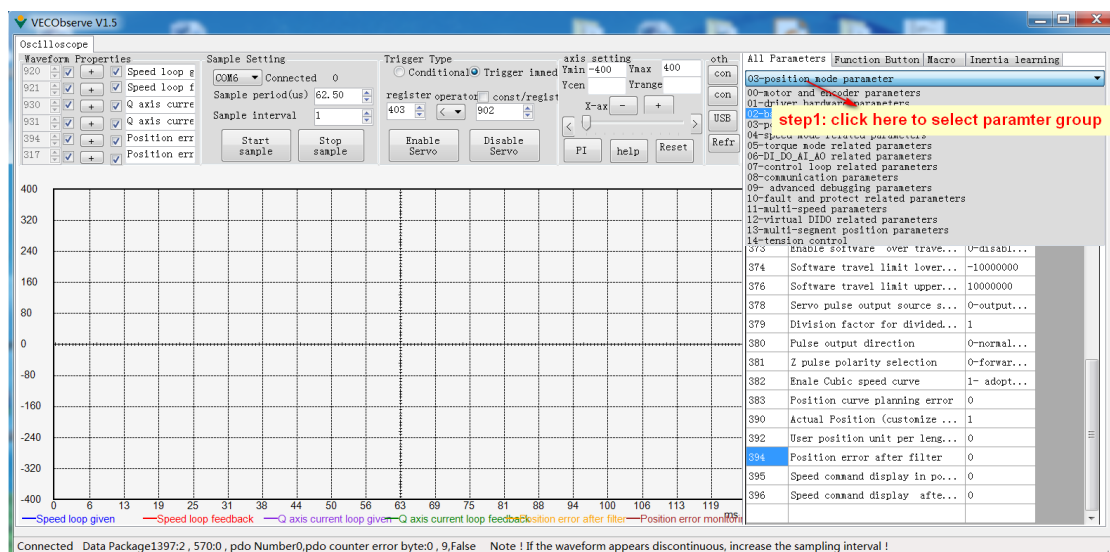


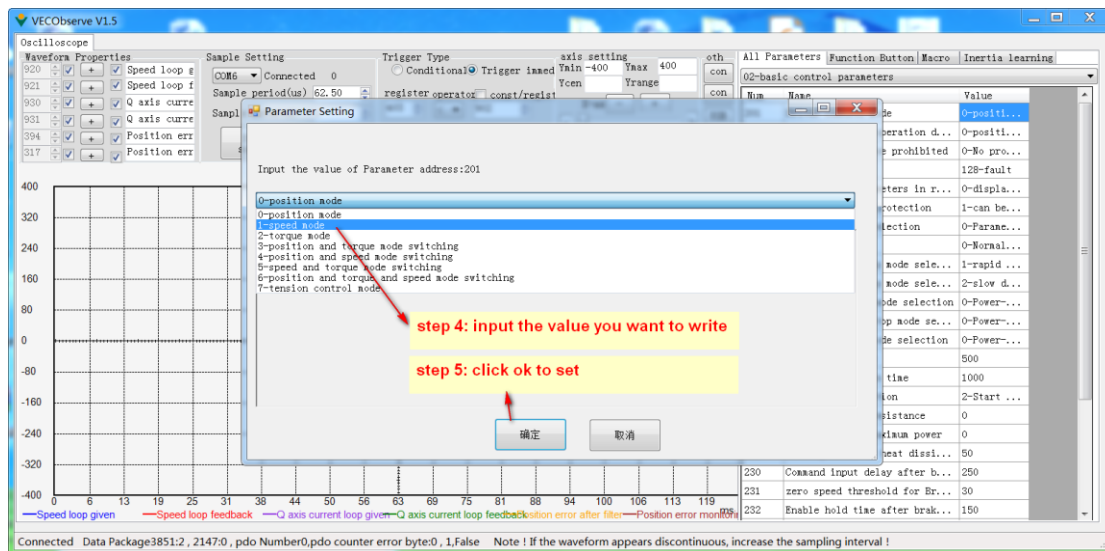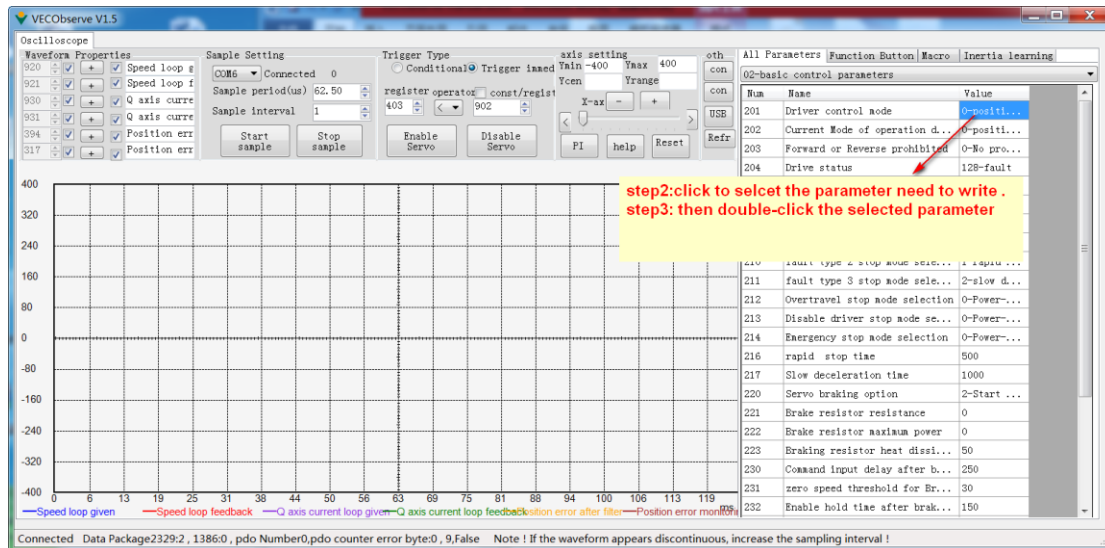


Monitor the running curve of any parameter in real time

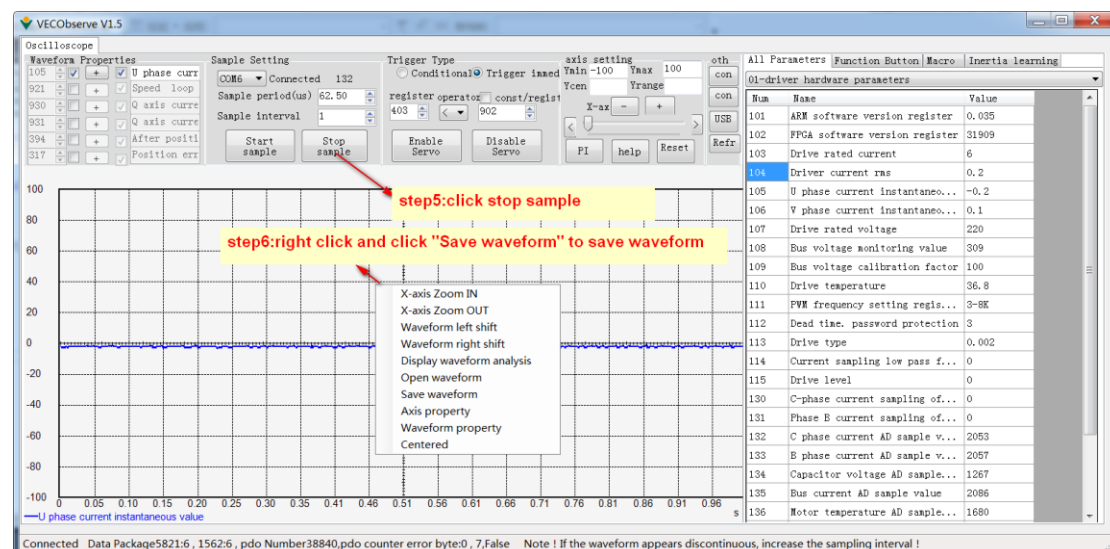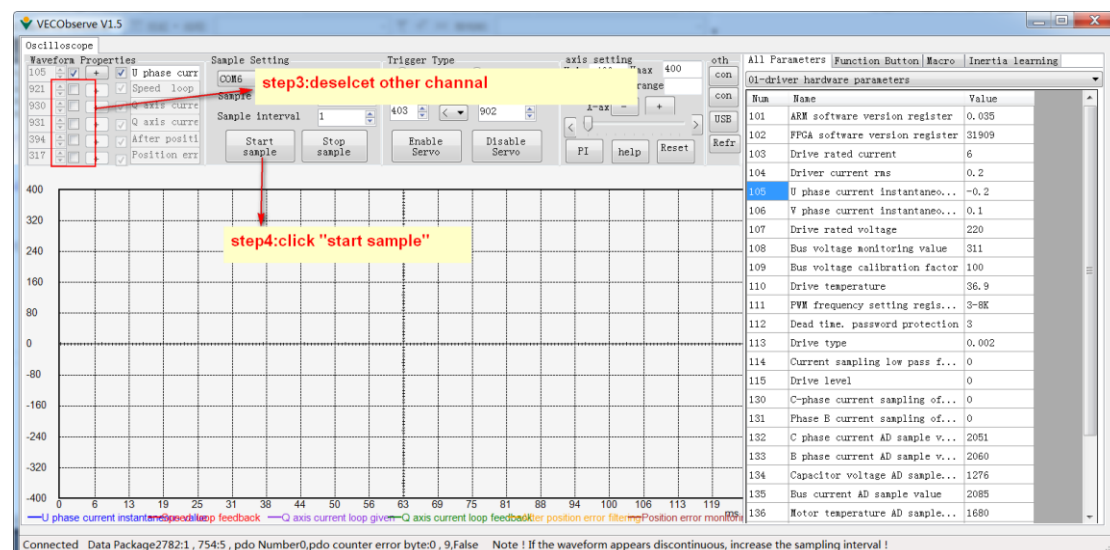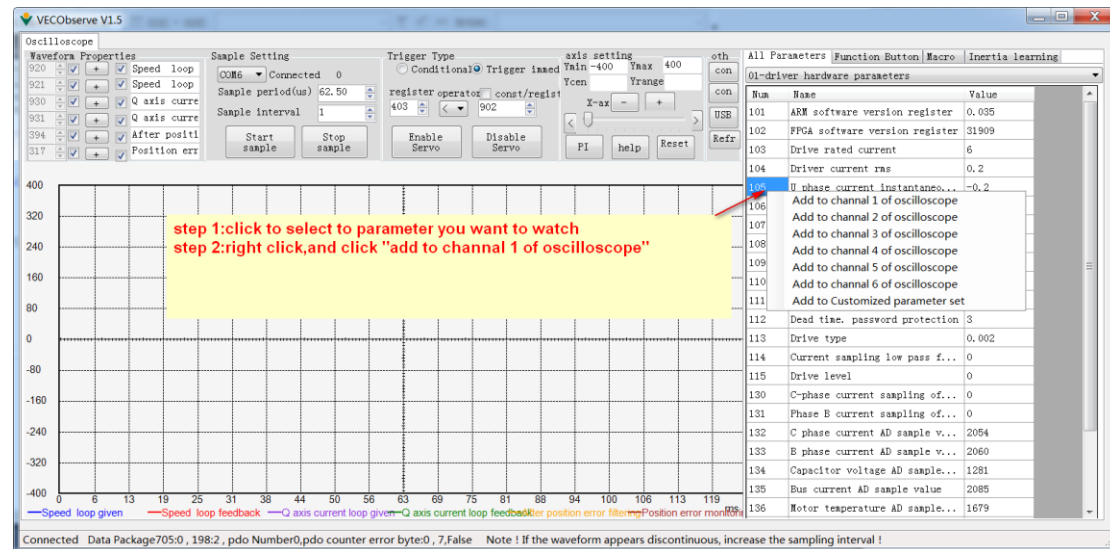

Save and load the running curve data

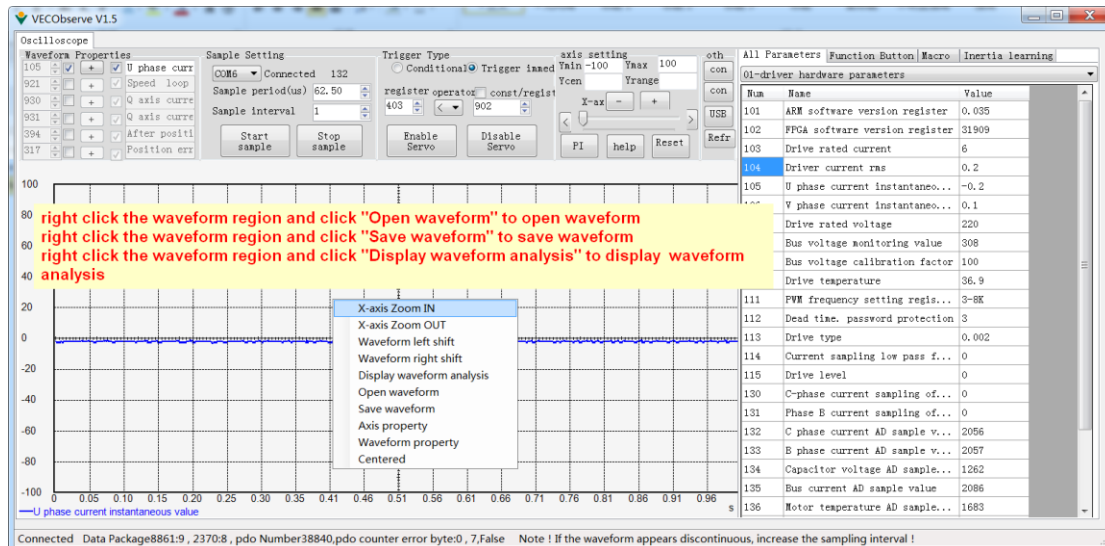

Update all parameters of the drive

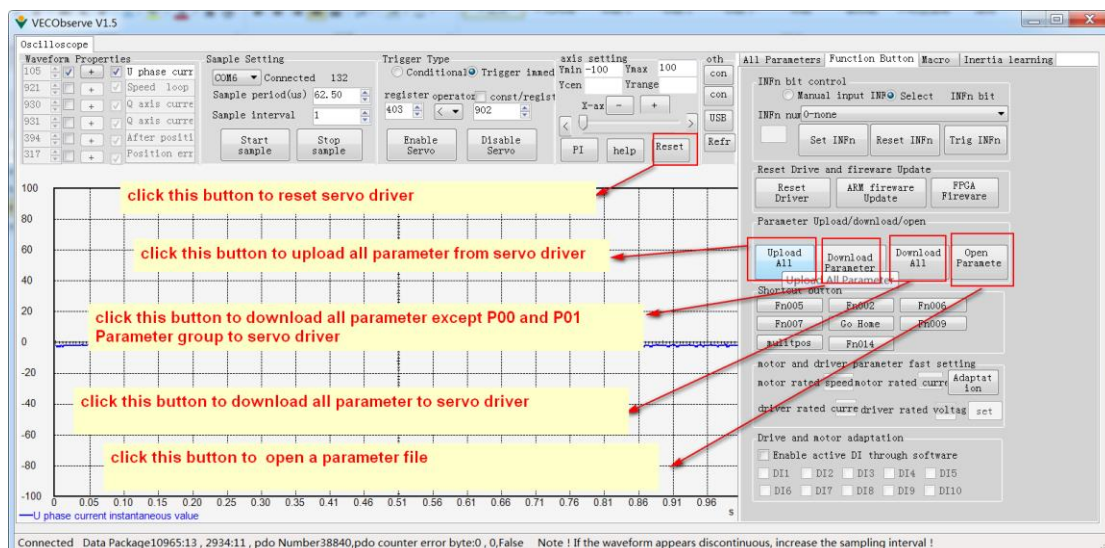

Read all the parameters of the drive

